

The present document was valid at the time of print. A later version may be available online

WM 978319 Removing and installing relay carrier 1

Preliminary work


Preliminary work for relay carrier 1

Remove front side section trim. → 702419 *Removing and installing front side section trim - section on "Removing"*

Remove trim panel under dashboard on driver's side. → 701919 *Removing and installing trim under instrument panel - section on "Removing"*

Removing relay carrier 1


Removing relay carrier 1 from the retaining frame

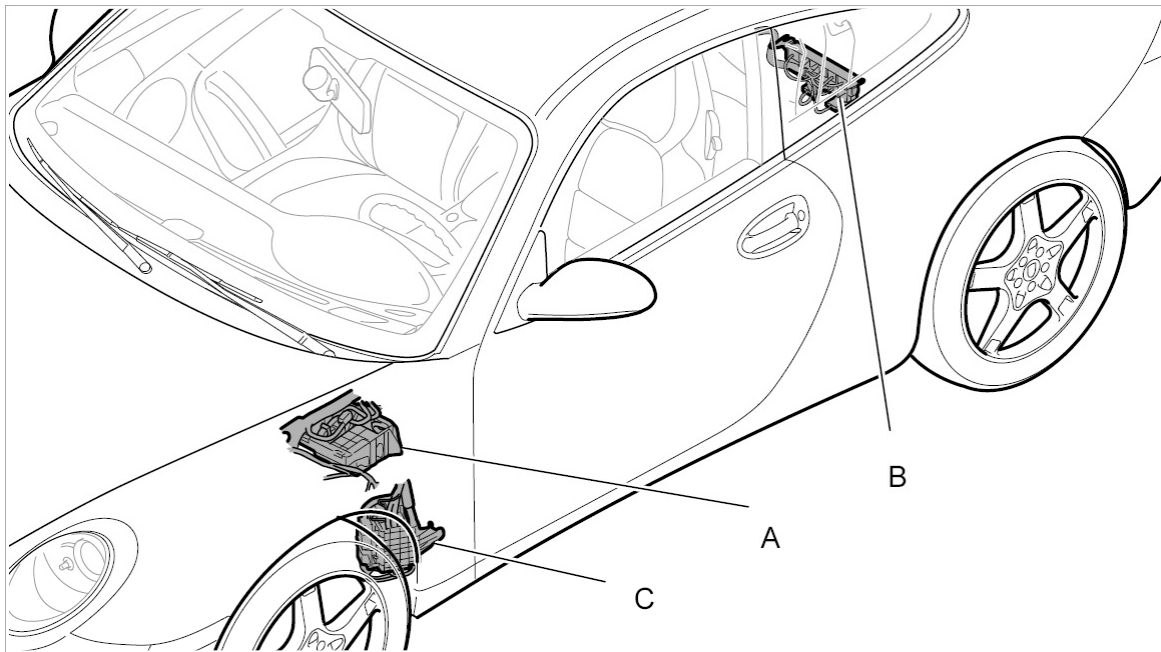

Installation position shown on the 911


A - Relay carrier 1

1. **-A-** Pull apart both retaining lugs on relay carrier support and press the relay carrier upward.

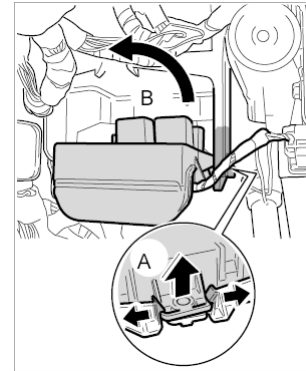

Removing relay carrier

2. **-B-** Press relay carrier upward approx. 45° on the right side.
3. **-C-** Pull out the support lugs of the relay carrier from the support and **-D-** pull out the relay carrier downward.

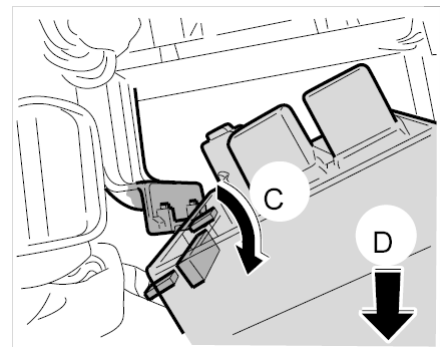


Pulling relay carrier out of the retaining frame

Installing relay carrier 1

Installing relay carrier 1 in the retaining frame

1. Slide in the relay carrier from below at approx. 45° slant into the support.

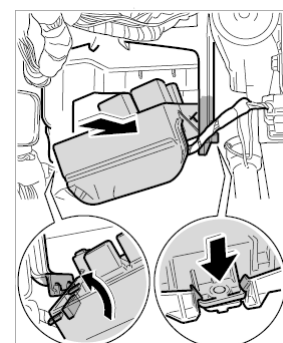

Pushing and engaging the relay carrier into its retaining frame

2. Secure the support lugs from the relay carrier into the support and engage the relay carrier in the support.

Subsequent work

Subsequent work on relay carrier 1

Install trim under dashboard on driver's side. → *701919 Removing and installing trim under instrument panel - section on "Installing"*

Install front side section trim. → *702419 Removing and installing front side section trim - section on "Installing"*

997110, 997111, 997120, 997121, 997310, 997311, 997320, 997321, 997410, 997411, 997420, 997421, 997430, 997431, 997510, 997511, 997520, 997521, 997610, 997611, 997620, 997621, 997630, 997631, 997810, 997811, 997830, 997840, 997841, 997850, 997851, 997140, 997141, 997450, 997451, 997650, 997651, 997720, 997721, 997820, 997860, 997861, 997150, 997151, 997160, 997161, 997170, 997350, 997351, 997360, 997361, 997370, 997460, 997461, 997560, 997561, 997660, 997661

Model year as of 2005

C00, C02, C05, C07, C08, C09, C10, C11, C12, C13, C14, C15, C16, C18, C19, C20, C21, C22, C23, C24, C25, C26, C27, C28, C32, C33, C34, C35, C36, C37, C38, C39, C45, C46, C98, C99